


Changes to AMP Variables


- Install WinNBI
- Open the BootController
- Open the Osai Device Manager (ODM)



- Find the Active AMP from the drop down list

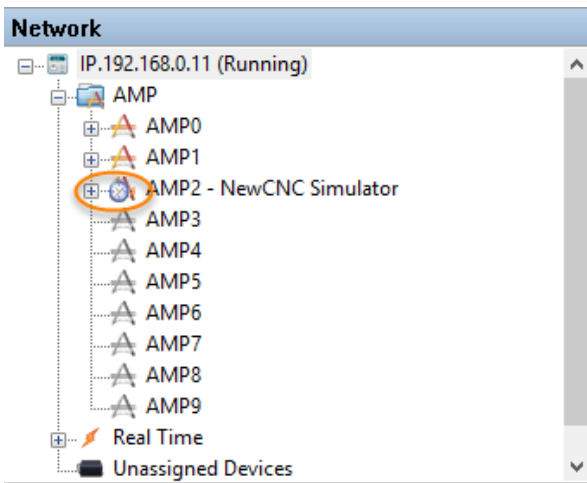

- 1) Navigate to the Double Variables
- 2) Change your variable value
- 3) Save changes
- 4) Compile the AMP

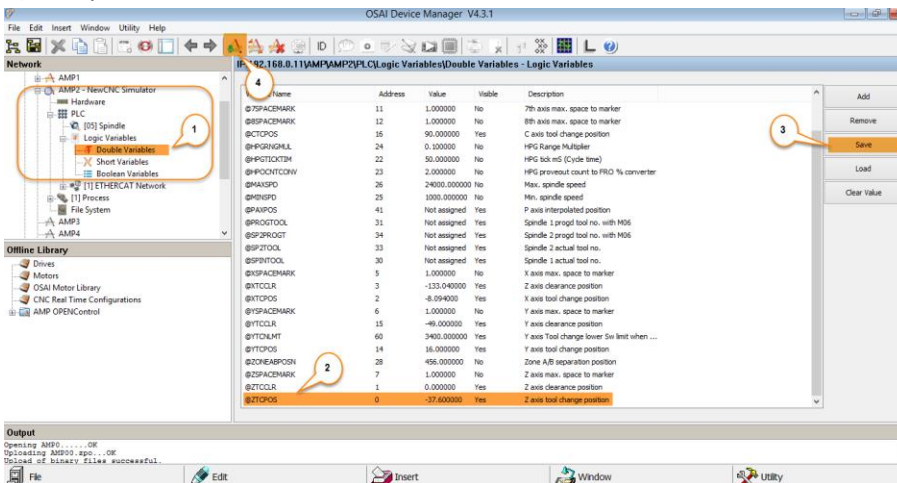

- You must restart the control for the changes to take effect